


2021/10/26

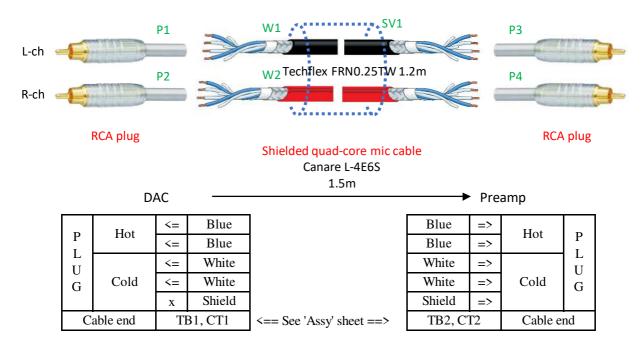


DAC to Preamp: CB1

RCA plug <==> RCA plug, unbalanced, 1.5m




Preamp to DAR: CB2

RCA plug <==> RCA plug, unbalanced, 2m

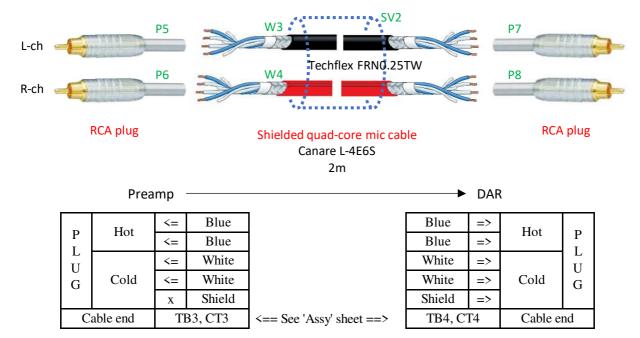


DAR to Preamp: CB3

RCA plug <==> RCA plug, unbalanced, 1.8m

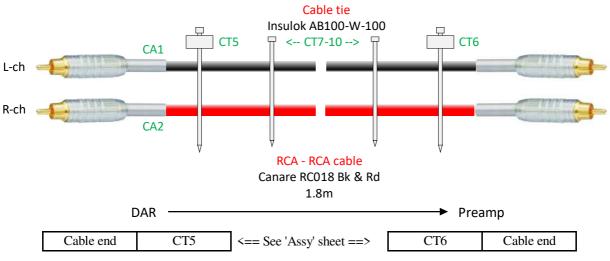


BDP to Preamp: CB4

RCA plug <==> RCA plug, unbalanced, 3m

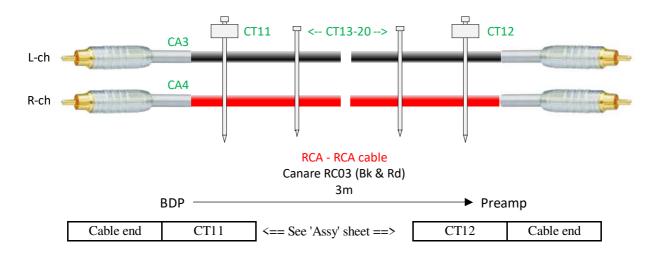


Preamp to Network: CB5

RCA plug <==> XLR plug, unbalanced, 3m

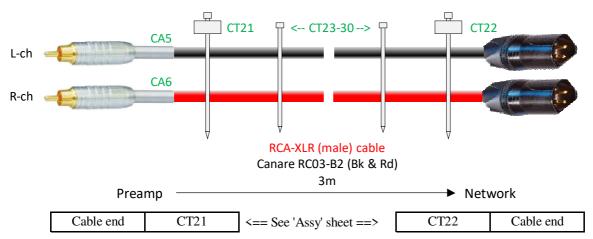


Network to Tweeter/Squawker Amp: CB6, CB7

XLR jack <==> XLR plug, balanced, 1m, 2 pairs

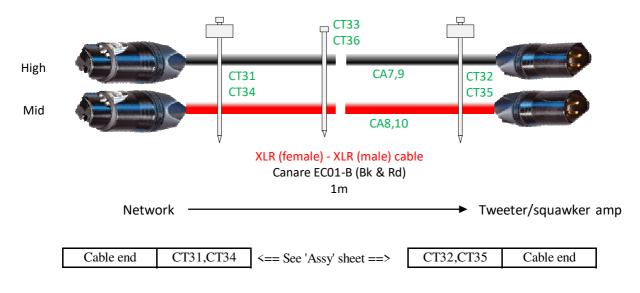


Network to Master Volume: CB8, CB9

XLR jack <==> XLR plug, balanced, 1.5m

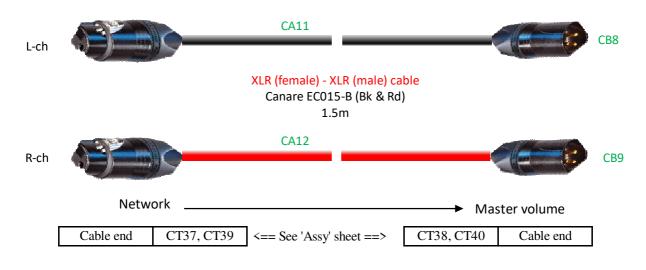


Master Volume to Woofer Amp: CB10, CB11

RCA plug <==> RCA plug, unbalanced, 1.8m

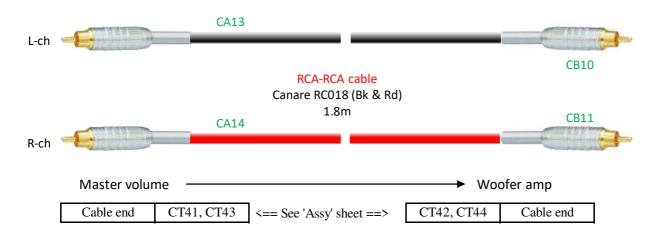


Network to Tweeter Amp: CB12

XLR jack <==> RCA plug, unbalanced, 1.5m This cable is for temporary use.

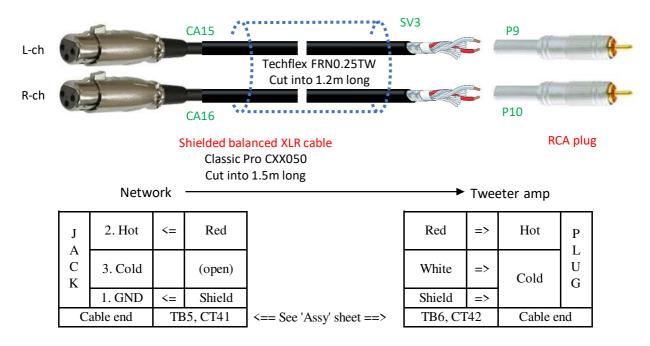


Network to Squawker Amp: CB13

XLR jack <==> RCA plug, unbalanced, 1.5m This cable is for temporary use.

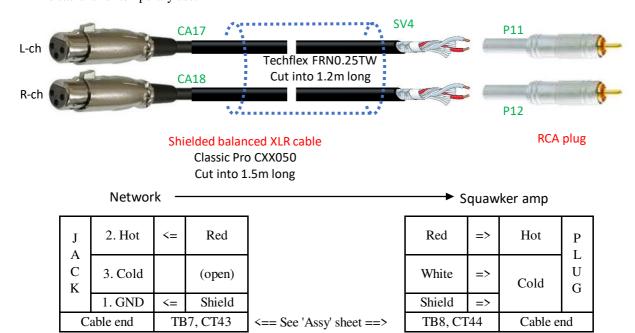

Network to Woofer Amp: CB14, CB15

XLR jack <==> RCA plug, unbalanced, 1.5m This cable is for temporary use.

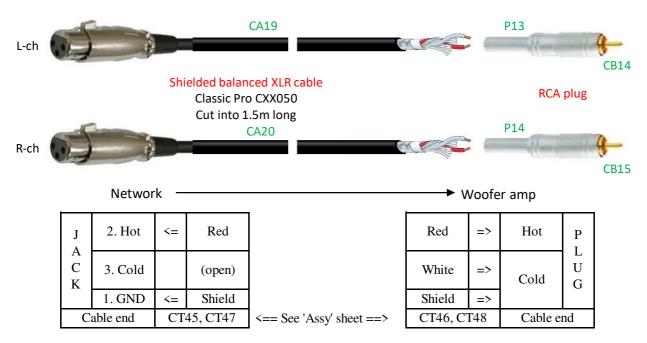

[END OF DOCUMENT]