




CC-218 IND BOARD

Design

2024/05/16


Assy

1. Fix SD1-2, WS15-16, NT3-4 on BD2

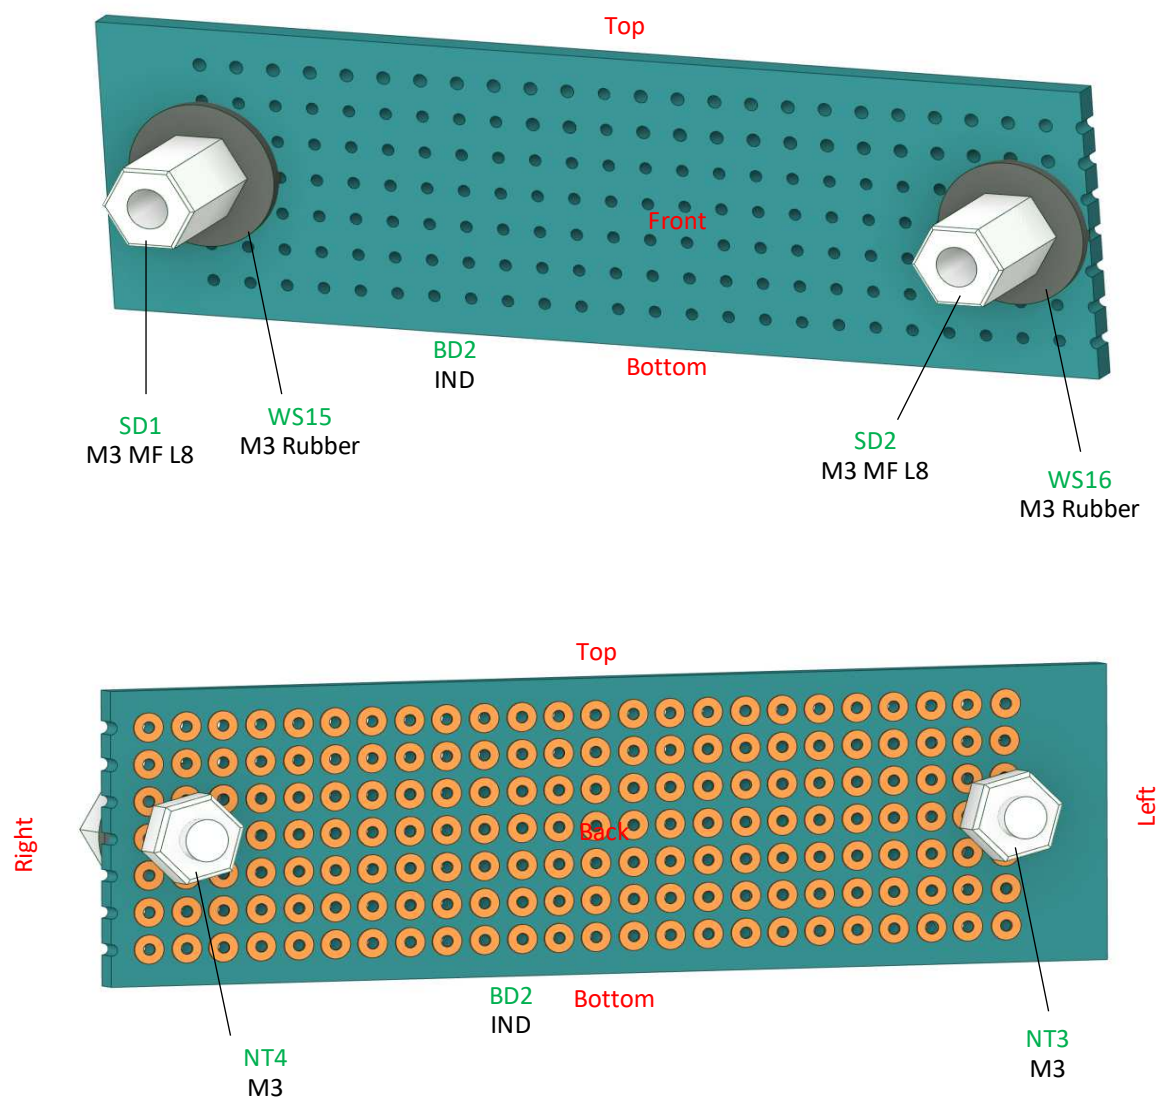


2. Insert LEDs

Carefully insert the LEDs in the right through holes.

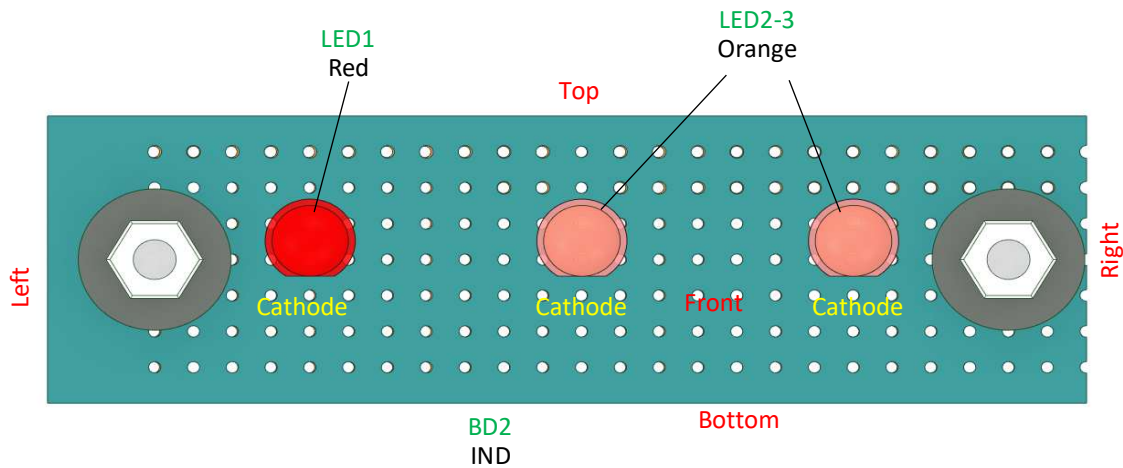


Adjust the height of LEDs so that the tops of LEDs protrude from the studs by 1mm.

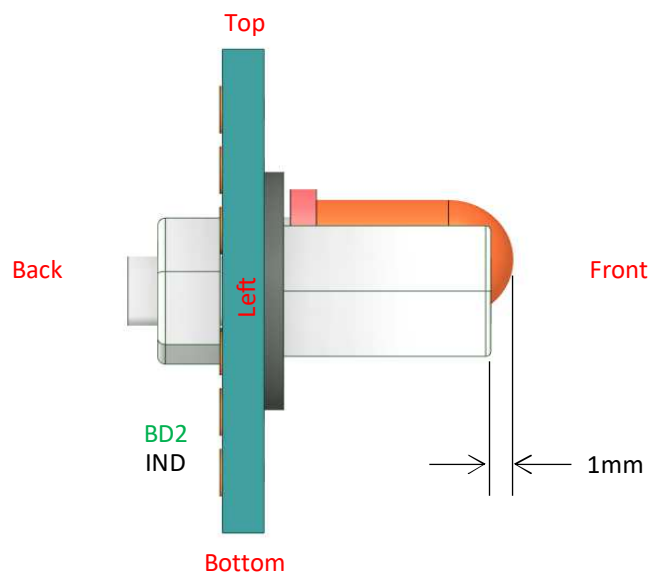


3. Fix LEDs

Solder the leads of LEDs to BD2.

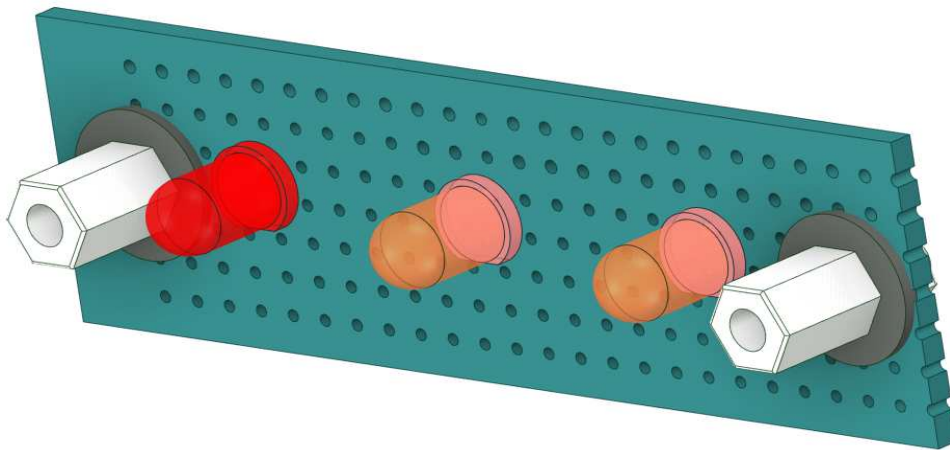

4. Route the leads of LEDs

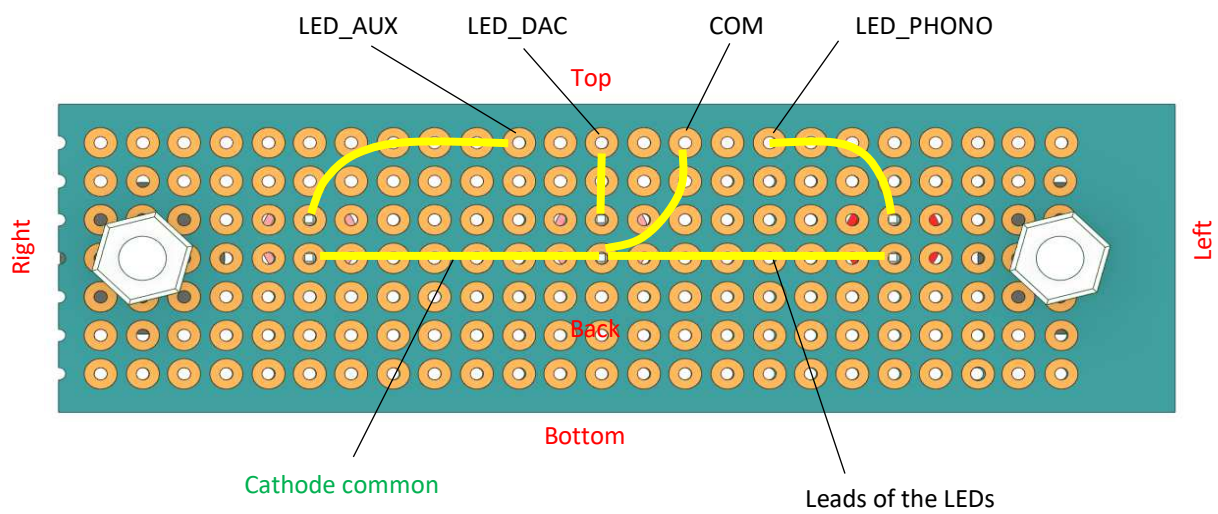

[END OF DOCUMENT]